



**PARTS LIST**




AEROKLAS U-BOX WITH 2 TRAYS

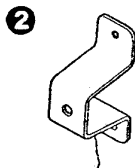


U-PLATE 2 PCS.

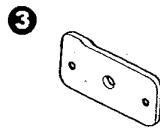


SIDE-PLATE 2 PCS.

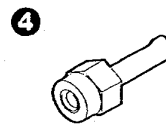


ADJUSTING ROD 2 PCS.

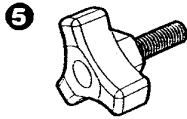


PLASTIC KNOB 4 PCS.

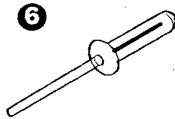

AERO RIVET 8 PCS.

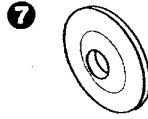

RUBBER SEAL MB 4 PCS.

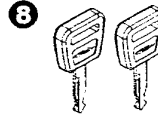

KEY 2 PCS.

**TOOLS REQUIRED**

1. MEASUREMENT TAPE
2. WHITE MARKER
3. CORDLESS DRILL
4. DRILL  $\varnothing$  5 , 9 mm.
5. HAND RIVETER

## INSTALLATION "U-PLATE" FOR PICKUP WITH AND WITHOUT BEDLINER

- 1. AEROKLAS U-BOX TO BE CENTERED. DRILL AREA MARKED (LEFT&RIGHT) AS SHOW IN THE PICTURE.**

**1.1** ATTACH U-PLATE **MUST BE ON SMOOTH SURFACE** AT 5-10 cm. FROM EDGE. DRILL  $\varnothing$  5 mm. **NOT LARGER**

**1.2** INSTALL THE U-PLATE WITH 2 AERO RIVET.

**1.3** ATTACH THE ADJUSTING ROD ON U-PLATE. SLIDE U-BOX TO THE ADJUSTING ROD. MARK AND DRILL  $\varnothing$  9 mm. **NOT LARGER.**

**1.4** INSTALL U-BOX ATTACHED WITH THE ADJUSTING ROD TIGHTEN WITH PLASTIC KNOB TOGETHER WITH RUBBER SEAL **FACE-FLAT SIDE TO PLASTIC KNOB**

DRILLED AREA IN GRAY COLOR

CENTER

## INSTALLATION "SIDE-PLATE" FOR PICKUP WITH BEDLINER ONLY

- 2. MARKING DRILL AREA OF SIDE PLATE (LEFT&RIGHT) ON LINER TO BE DONE ON SMOOTH SURFACE AREA ON THE LINER**

**2.1** INSTALL SIDE-PLATE ON LINER AT SMOOTH SURFACE AREA. DRILL  $\varnothing$  9 mm. CENTER AND  $\varnothing$  5 mm. FOR LEFT&RIGHT AT 4-5 cm. FROM EDGE.

**2.2** INSTALL THE SIDE-PLATE WITH 2 AERO RIVET

**2.3** DRILL U-BOX AT CENTER POSITION OF SIDE-PLATE WITH A  $\varnothing$  9 mm. **NOT LARGER**

**2.4** INSTALL U-BOX AND ADJUSTING ROD. TIGHTEN WITH PLASTIC KNOB (BACK&SIDE) TOGETHER WITH RUBBER SEAL **FACE FLAT SIDE TO PLASTIC KNOB** PUT THE TRAY IN AEROKLAS U-BOX

**RECOMMENDATION FOR LOCK SYSTEM**

1. TO CLOSE-PRESS ABOVE LOGO AEROKLAS U-BOX POSITION
2. TO LOCK-TURN CLOCKWISE